

	MINI Cooper	MINI Cooper S
	•	•
	•	•
	•	•
Examine brake disc	•	•
	•	•

Inspection I

Only those items of inspection work which apply to your vehicle will be performed. This list is subject to amendment.

Undercarriage

	MINI Cooper	MINI Cooper S
Change oil and oil filter while engine is at normal operating temperature. We recommend MINI 5W-30 High Performance Synthetic Oil, p/n 07 51 0 143 829.	•	•
Change CVT (automatic) transmission fluid.	•	•
Check transmission for leaks.	•	•
Half-shafts: Check for leaks at flexible boots.	•	•
Visually check fuel tank, lines and connections for leaks.	•	•
Check condition, position, and mounting of exhaust system. Examine for leaks.	•	•
Check power steering system for leaks. Check power steering fluid level; add fluid if necessary.	•	•
Check steering for absence of play, condition of suspension track rods, front axle joints, steering linkage and joint disc.	•	•
Check overall thickness of front and rear disc brake pads using special tool. If replacement is necessary: Examine brake disc surfaces. Clean brake pad contact points in calipers. Grease wheel centering hubs. Check thickness of parking brake linings only when replacing rear brake pads.	•	•
Check brake system connections and lines for leaks, damage and incorrect positioning.	•	•
Check parking brake actuation. Adjust if necessary.	•	•
Check all tire pressures (including spare if equipped). Correct if necessary. Check condition of tires (outer surface [left/right]), tread wear and pattern; in case of uneven tread wear, readjust wheel alignment if requested (invoice separately).	•	•
Inspect entire body according to terms of rust performance limited warranty. (Must be performed at least every two years).	•	•

Engine Compartment

	MINI Cooper	MINI Cooper S
Read out diagnostic system.	•	•
Check engine cooling system/heater hose connections for leaks. Check coolant level and antifreeze protection level. Add coolant if required.	•	•
Check windshield washer fluid level and antifreeze protection. Fill up and/or correct if required.	•	•
Check air conditioner for operation.	•	•
Replace microfilter. (Note: reduce replacement interval in dusty operating conditions.)	•	•
Reset service interval indicator.	•	•